


DATE: July, 2001  
MANUAL REVISION 2.0

# STP131 Series

## Operator's Manual

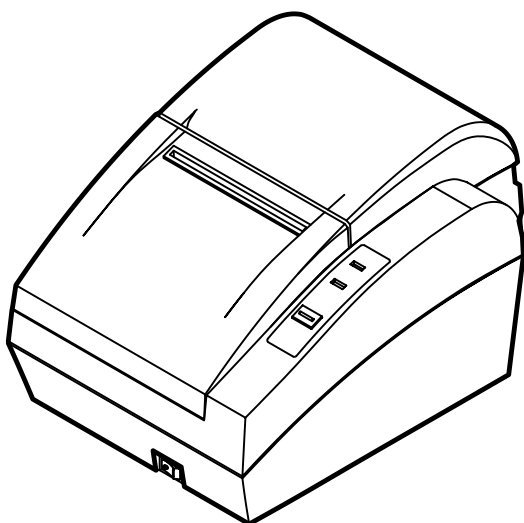

**SAMSUNG**  
ELECTRO-MECHANICS

TEL: 82-31-210-5620  
FAX: 82-31-210-5589

### Warning - U.S

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses, and can radiate radio frequency energy and, if not installed and uses in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### Notice - Canada

This Apparatus complies with class "A" limits for radio interference as specified in the Canadian department of communications radio interference regulations.

Get appareil est conforme aux normes class "A" d'interference radio tel que specifier par ministre canadien des communications dans les reglements d'interference radio.

### Caution

Some semiconductor devices are easily damaged by static electricity. You should turn the printer "OFF", before you connect or remove the cables on the rear side, in order to guard the printer against the static electricity. If the printer is damaged by the static electricity, you should turn the printer "OFF".

### Introduction

The STP131 Series Roll Printer are designed for use with electronic instruments such as system ECR, POS, banking equipment peripheral equipment, etc.

The main features of the printer are as follows:

1. High speed printing : 17.3(1/6" Feed) lines per second.
2. Low noise thermal printing.
3. RS-232(STP131 Series), Parallel(STP131 Series)
4. The data buffer allows the unit to receive print data even during printing.
5. Peripheral units drive circuit enables control of external devices such as cash drawer.
6. Characters can be scaled up to 64 times compared to it's original size.
7. Bar code printing is possible by using a bar code command.
8. Different print densities can be selected by DIP switches.

Please be sure to read the instruction in this manual carefully before using your new STP131 Series.

NOTE : The socket-outlet shall be near the equipment and it shall be easy accessible.


## Table of Contents

<b>Chapter 1. Setting up the printer</b>	4
1-1. Unpacking	4
1-2. Connecting the cables	5
1-3. Connecting the computer	6
1-4. Connecting the drawer	6
1-5. Connecting the power supply	7
1-6. Installing or replacing the paper roll	8
1-7. Adjustments and settings	10
1-8. Using the Printer	10
<b>Chapter 2. Hexadecimal dumping</b>	12
<b>Chapter 3. The self test</b>	13
<b>Chapter 4. Code table</b>	14
<b>Chapter 5. Control commands</b>	22
<b>Appendix</b>	44
A. Connectors	44
Interface connector	44
Drawer connector	46
B. Notes	46
C. Specification	47

## Chapter 1. Setting Up the Printer

### 1-1. Unpacking

Your printer box should include these items. If any items are damaged or missing, please contact your dealer for assistance.

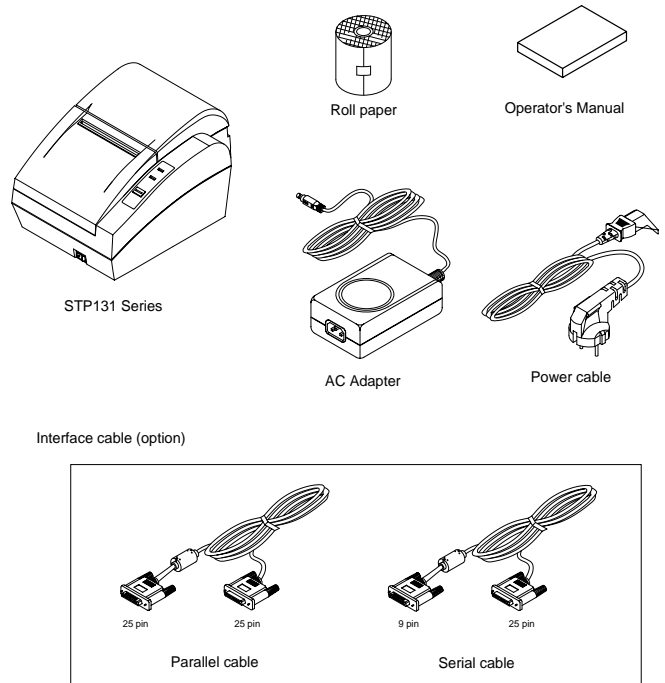


## 1-2. Connecting the Cables

You can connect up to three cables to the printer. They all connect to the connector panel on the back of the printer, which is shown below:



Power supply connector



Interface connector



Drawer kick-out connector


**NOTE :** Before connecting any of the cables, make sure that both the printer and the host are turned off.

5

## 1-3. Connecting the Computer

You need an appropriate interface cable.

1. Plug the cable connector securely into the printer's interface connector.
2. Tighten the screws on both sides of the cable connector.

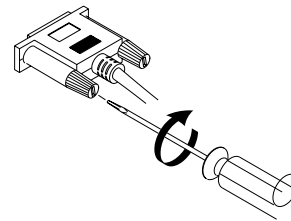

3. Attach the other end of the cable to the computer.

## 1-4. Connecting the Drawer

### **WARNING :**

Use a drawer that matches the printer specification. Using an improper drawer may damage the drawer as well as the printer.

### **CAUTION :**

Do not connect a telephone line to the drawer kick-out connector; otherwise the printer and the telephone line may be damaged.

Plug the drawer cable into the drawer kick-out connector on the back of the printer next to the power supply connector.

6


### 1-5. Connecting the Power Supply

#### CAUTION :

When connecting or disconnecting the power supply from the printer, make sure that the power supply is not plugged into an electrical outlet. Otherwise you may damage the power supply or the printer.

If the power supply's rated voltage and your outlet's voltage do not match, contact your dealer for assistance. Do not plug in the power cord. Otherwise, you may damage the power supply or the printer.

1. Make sure that the Printer's power switch is turned off, and the power supply's power cord is unplugged from the electrical outlet.
2. Check the label on the power supply to make sure that the voltage required by the power supply matches that of your electrical outlet.
3. Plug in the power supply's Adapter cable as shown below. Notice that the flat side of the plug faces down.

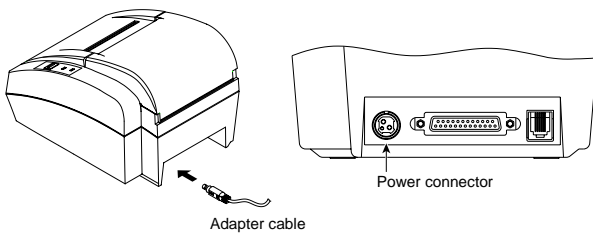


NOTE : To remove the DC cable connector, make sure that the power supply's power cord is unplugged; then grasp the connector at the arrow and pull it straight out.

7

### 1-6. Installing or Replacing the Paper Roll

NOTE : Be sure to use paper rolls that specifications. Do not use paper rolls that have the paper glued to the core because the printer cannot detect the paper end correctly.


1. Make sure that the printer is not receiving data; otherwise, data may be lost.
2. Open the paper roll cover by pull up the cover.

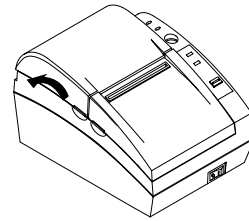

※ You must turn on the printer before replace the paper roll.


NOTE : Do not open the print cover while the printer is operating. This may damage the printer.

3. Remove the used paper roll core if there is one.
4. Insert the paper roll.

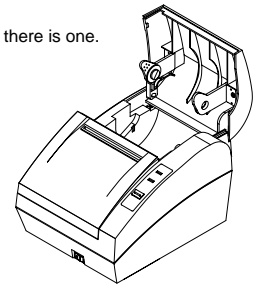


8

5. Be sure to note the correct direction that the paper comes off the roll.

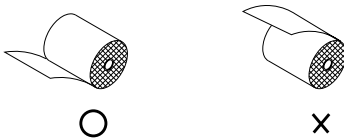


6. Close the cover.

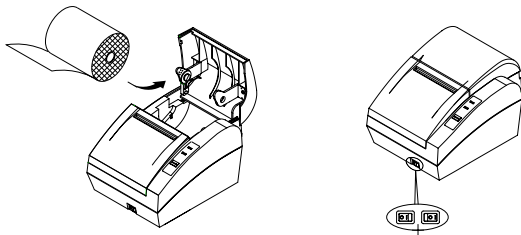

NOTE : When closing the cover, press the center of printer cover firmly to prevent Paper miss-loading.

7. Tear off the paper as shown.

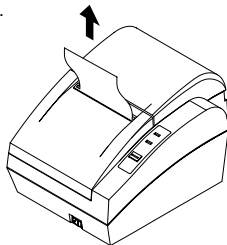

### 1-7. Adjustments and Settings


The STP131 Series is set up at the factory to be appropriate for almost all users. It does, however, offer some settings for users with special requirements.

It has DIP switches that allow you to change communication settings, such as handshaking and parity check, as well as print density.

This STP131 Series also has a near-end sensor for the paper. This can give you a warning when the paper is almost out. If you find that there is not enough paper remaining on the roll when the paper low is triggered, the Error LED (Red) is turned on.

### 1-8. Using the Printer

#### Control Panel

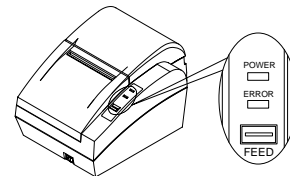

#### Button

The button can be disabled by the ESC c 5 command.

Press the FEED button once to advance paper one line. You can also hold down the FEED button to feed paper continuously.

#### Panel lights

Power (Green)


The POWER light is on whenever the printer is on.

ERROR (Red)

- 1) The error LED blinks fast when paper is out.
- 2) The error LED blinks when the Near End Sensor is triggered.

NOTE : Both Power and Error LED is blank when the mecha cover is open.

## Serial Interface Specification

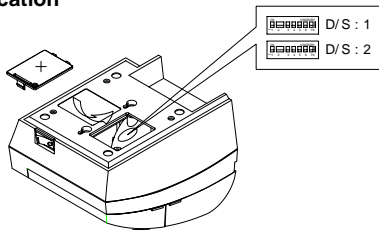

### DIP Switch Functions

No.	Dip Switch 1				
	Level	BPS	D/W1	D/W2	S/W3
1	1	2400	ON	OFF	OFF
	2	4800	OFF	ON	OFF
2	3	9600	OFF	OFF	ON
	4	19200	ON	OFF	ON
3	5	38400	ON	ON	OFF
	6	57600	OFF	ON	ON
	7	115200	ON	ON	ON
	Function		ON	OFF	
4	Density		Dark	Normal	
5	Handshaking		Xon/Xoff	DTR/DSR	
6	Auto Feeding		With cutting	Without cutting	
7	Reserved		Combination code	Completion code	
8	Language		English	Korean	

No.	Dip Switch 2		
	Function	ON	OFF
1	Cut	Full Cut	Partial Cut
2	Not used. Fixed to OFF		
3	Not used. Fixed to OFF		
4	Not used. Fixed to OFF		
5	Not used. Fixed to OFF		
6	Not used. Fixed to OFF		
7	Not used. Fixed to OFF		
8	Not used. Fixed to OFF		

## Chapter 2. Hexadecimal Dumping

This feature allows experienced users to see exactly what data is coming to the printer. This can be useful in finding software problems. When you turn on the hexadecimal dump function, the printer prints all commands and data in hexadecimal format along with a guide section to help you find specific commands.

To use the hexadecimal dump function, follow these steps:

1. Set DIP Switch 2 (sw- 7 = Hex dump mode) of your printer ON position.
2. Turn on the power of your printer.
3. Run any software program that sends data to the printer. The printer will print all the codes it receives in a two-column format. The first column contains the hexadecimal codes and the second column gives the ASCII characters that corresponds to the codes.

```
1B 21 00 1B 26 02 40 40    40    .!. .&.@@@
02 0D 1B 44 0A 14 1E 28    28    ..D...(((
00 01 0A 41 0D 42 0A 43    43    ..A.B.CCC
```

- A period (.) is printed for each code that has no ASCII equivalent.
- During the hex dump, all commands except **DEL EOT** is disabled.

4. Close the cover, then the printer enters the hexadecimal dump mode.
5. Set DIP Switch 2 (sw- 7 = Hex dump mode) of your printer off position and then hexadecimal mode is off.

### Chapter 3. The self test

The self-test checks whether the printer has any problems. If the printer does not function properly, contact your dealer. The self-test checks the following:

1. Make sure paper roll has been installed properly.
2. Turn on the power while holding down the FEED button. The self-test begins.
3. The self-test prints the current printer status, which provides the control ROM version and the DIP switch setting.
4. After printing the current printer status, self-test printing will print the following, and pause.

**Self-test printing.**  
Please press the FEED button

5. Press the FEED button to continue printing. The printer prints a pattern using the built-in character set.
6. The self-test automatically ends and cuts the paper after printing the following.

\* \* \* SELF TEST \* \* \*

The printer is ready to receive data as soon as it completes the self-test.

### Chapter 4. Code Table

The following pages show the character code tables. To find the character corresponding to a hexadecimal number, count across the top of the table for the left digit and count down the left column of the table for the right digit. For example, 4A = J.

HEX	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0000	NUL	DLE	SP	0	@	P	'	p	Ç	E	ä	¶	L	„	≡
1	0001	XON	!	1	A	Q	a	q	ü	æ	i	¶	±	ƒ	β	±
2	0010		"	2	B	R	b	r	ë	Æ	ö	¶	π	Γ	σ	±
3	0010	XOFF	%	3	C	S	c	s	á	ó	ú	ı	ı	ı	π	z
4	0100	EOT	\$	4	D	T	d	t	â	ô	ñ	ı	ı	ı	ı	ı
5	0101	ENQ	%	5	E	U	e	u	á	ò	Ñ	ı	ı	ı	ı	ı
6	0110		&	6	F	V	f	v	á	ú	ı	ı	ı	ı	ı	ı
7	0111		'	7	G	W	g	w	ç	ù	ı	ı	ı	ı	ı	ı
8	1000	BS	CAN	(	8	H	X	h	x	è	ÿ	ı	ı	ı	ı	ı
9	1001	HT	)	9	I	Y	i	y	é	ò	ı	ı	ı	ı	ı	ı
A	1010	LF	*	:	J	Z	j	z	ê	ı	ı	ı	ı	ı	ı	ı
B	1011	ESC	+	:	K	[	k	{	ı	ı	ı	ı	ı	ı	ı	ı
C	1100	FF	FS	,	<	L	\		ı	ı	ı	ı	ı	ı	ı	ı
D	1101	CR	GS	-	=	M	]	m	}	ı	ı	ı	ı	ı	ı	ı
E	1110		.	>	N	^	n	~	ı	ı	ı	ı	ı	ı	ı	ı
F	1111		/	?	O	_	o	SP	ı	ı	ı	ı	ı	ı	ı	ı

**Page 0 (PC437 : USA, Standard Europe)**  
**(International Character Set : USA)**

HEX	HEX	8	9	A	B	C	D	E	F
HEX	BIN	1000	1001	1010	1011	1100	1101	1110	1111
0	0000	128	144	SP	176	タ	ミ	ニ	×
1	0001	129	145	161	177	チ	ム	ト	円
2	0010	130	146	162	178	ツ	メ	キ	年
3	0010	131	147	163	179	テ	モ	コ	月
4	0100	132	148	164	180	ト	ヤ	日	244
5	0101	133	149	165	181	ナ	コ	時	245
6	0110	134	150	166	182	ニ	ヨ	分	246
7	0111	135	151	167	183	キ	ラ	秒	247
8	1000	136	152	168	184	ネ	リ	千	249
9	1001	137	153	169	185	ケ	ル	市	249
A	1010	138	154	170	186	コ	レ	区	250
B	1011	139	155	171	187	サ	ヒ	町	251
C	1100	140	156	172	188	シ	フ	村	252
D	1101	141	157	173	189	ス	ン	人	253
E	1110	142	158	174	190	セ	ホ	千	254
F	1111	143	159	175	191	マ	・	SP	255

Page 1 (Katakana)

HEX	HEX	8	9	A	B	C	D	E	F
HEX	BIN	1000	1001	1010	1011	1100	1101	1110	1111
0	0000	128	144	160	176	192	208	224	240
1	0001	129	145	161	177	193	209	225	241
2	0010	130	146	162	178	194	210	226	242
3	0010	131	147	163	179	195	211	227	243
4	0100	132	148	164	180	196	212	228	244
5	0101	133	149	165	181	197	213	229	245
6	0110	134	150	166	182	198	214	230	246
7	0111	135	151	167	183	199	215	231	247
8	1000	136	152	168	184	200	216	232	249
9	1001	137	153	169	185	201	217	233	249
A	1010	138	154	170	186	202	218	234	250
B	1011	139	155	171	187	203	219	235	251
C	1100	140	156	172	188	204	220	236	252
D	1101	141	157	173	189	205	221	237	253
E	1110	142	158	174	190	206	222	238	254
F	1111	143	159	175	191	207	223	239	255

Page 2 (PC850 : Multilingual)



HEX	HEX	8	9	A	B	C	D	E	F
HEX	BIN	1000	1001	1010	1011	1100	1101	1110	1111
0	0000	Ç	É	á	■	Ł	„	α	≡
		128	144	160	176	192	208	224	240
1	0001	ü	À	í	■	⊥	̄	β	±
		129	145	161	177	193	209	225	241
2	0010	é	Ê	ó		τ	π	Γ	≤
		130	146	162	178	194	210	226	242
3	0010	â	ô	ú		†		π	≥
		131	147	163	179	195	211	227	243
4	0100	ä	ö	ñ	†	—	Ł	Σ	∫
		132	148	164	180	196	212	228	244
5	0101	à	ò	ñ	†	+	F	α	∫
		133	149	165	181	197	213	229	245
6	0110	Á	ú	ª	†	†		μ	÷
		134	150	166	182	198	214	230	246
7	0111	ç	ù	ª	†	†	#	τ	≈
		135	151	167	183	199	215	231	247
8	1000	è	ì	¿		Ł	+	Φ	*
		136	152	168	184	200	216	232	249
9	1001	É	õ	Ò	†	ff	┘	θ	*
		137	153	169	185	201	217	233	249
A	1010	è	Û	¬		„	┘	Ω	*
		138	154	170	186	202	218	234	250
B	1011	í	ç	1/2		τ	■	δ	√
		139	155	171	187	203	219	235	251
C	1100	Ö	£	1/4	„	†	■	∞	n
		140	156	172	188	204	220	236	252
D	1101	ì	Û	ì	„	==	■	φ	²
		141	157	173	189	205	221	237	253
E	1110	Á	Pt	«	„	†	■		
		142	158	174	190	206	222	238	254
F	1111	À	Ó	»	┘	±	■	SP	
		143	159	175	191	207	223	239	255

Page 3 (PC860 : Portuguese)

HEX	HEX	8	9	A	B	C	D	E	F
HEX	BIN	1000	1001	1010	1011	1100	1101	1110	1111
0	0000	Ç	É	á	■	Ł	„	α	≡
		128	144	160	176	192	208	224	240
1	0001	ü	À	í	■	⊥	̄	β	±
		129	145	161	177	193	209	225	241
2	0010	é	Ê	ó		τ	π	Γ	≤
		130	146	162	178	194	210	226	242
3	0010	â	ô	ú		†		π	≥
		131	147	163	179	195	211	227	243
4	0100	ä	ö	ñ	†	—	Ł	Σ	∫
		132	148	164	180	196	212	228	244
5	0101	à	ò	ñ	†	+	F	α	∫
		133	149	165	181	197	213	229	245
6	0110	Á	ú	ª	†	†		μ	÷
		134	150	166	182	198	214	230	246
7	0111	ç	ù	ª	†	†	#	τ	≈
		135	151	167	183	199	215	231	247
8	1000	è	ì	¿		Ł	+	Φ	*
		136	152	168	184	200	216	232	249
9	1001	É	õ	Ò	†	ff	┘	θ	*
		137	153	169	185	201	217	233	249
A	1010	è	Û	¬		„	┘	Ω	*
		138	154	170	186	202	218	234	250
B	1011	í	ç	1/2		τ	■	δ	√
		139	155	171	187	203	219	235	251
C	1100	Ö	£	1/4	„	†	■	∞	n
		140	156	172	188	204	220	236	252
D	1101	ì	Û	ì	„	==	■	φ	²
		141	157	173	189	205	221	237	253
E	1110	Á	Û	«	„	†	■		
		142	158	174	190	206	222	238	254
F	1111	À	Ó	»	┘	±	■	SP	
		143	159	175	191	207	223	239	255

Page 4 (PC863 : Canadian-French)

HEX	HEX	8	9	A	B	C	D	E	F
HEX	BIN	1000	1001	1010	1011	1100	1101	1110	1111
0	0000	Ç	É	à	¶	Ł	„	α	240
1	0001	ü	æ	í	¶	±	ƒ	β	±
2	0010	é	Æ	ó	¶	ƒ	π	Γ	≥
3	0010	â	ô	ú	l	†	ll	π	≤
4	0100	ä	ö	ñ	†	—	Ł	Σ	∫
5	0101	à	ò	ñ	†	+	ƒ	°	∫
6	0110	â	û	á	†	ƒ	¶	μ	÷
7	0111	ç	ù	ª	¶	¶	¶	τ	≈
8	1000	ê	ÿ	¿	¶	ll	¶	Φ	°
9	1001	ë	Ö	ƒ	¶	¶	¶	θ	•
A	1010	è	Ü	ˆ	ll	„	¶	Ω	•
B	1011	ï	ø	1/2	¶	¶	¶	δ	251
C	1100	î	£	1/4	¶	¶	¶	∞	n
D	1101	ì	Ø	í	¶	¶	¶	φ	²
E	1110	Ä	Pt	«	¶	¶	¶	•	254
F	1111	Å	f	◊	¶	¶	¶	SP	255

Page 5 (PC865 : Nordic)

HEX	HEX	8	9	A	B	C	D	E	F
HEX	BIN	1000	1001	1010	1011	1100	1101	1110	1111
0	0000	SP	SP	SP	SP	SP	SP	SP	SP
1	0001	SP	SP	SP	SP	SP	SP	SP	SP
2	0010	SP	SP	SP	SP	SP	SP	SP	SP
3	0010	SP	SP	SP	SP	SP	SP	SP	SP
4	0100	SP	Ö	SP	SP	SP	SP	SP	SP
5	0101	SP	SP	SP	SP	SP	SP	SP	SP
6	0110	SP	SP	SP	SP	SP	SP	SP	SP
7	0111	SP	SP	SP	SP	SP	SP	SP	SP
8	1000	SP	SP	SP	SP	SP	SP	SP	SP
9	1001	SP	SP	SP	SP	SP	SP	SP	SP
A	1010	SP	SP	SP	SP	SP	SP	SP	SP
B	1011	SP	SP	SP	SP	SP	SP	SP	SP
C	1100	SP	SP	SP	SP	SP	SP	SP	SP
D	1101	SP	SP	SP	SP	SP	SP	SP	SP
E	1110	SP	SP	SP	SP	SP	SP	SP	SP
F	1111	SP	SP	SP	SP	SP	SP	SP	SP

Page 255 (Space Page)

## Chapter 5. Control Commands

The commands listed in the table below are available for control of the printer.

### Commands

Command	Name	Command Classification		Standard Mode
		Executing	Setting	
HT	Horizontal tab	<input type="radio"/>		<input type="radio"/>
LF	Print and line feed	<input type="radio"/>		<input type="radio"/>
CR	Print and carriage return	<input type="radio"/>		<input type="radio"/>
DLE EOT	Real-time status transmission	<input type="radio"/>		<input type="radio"/>
ESC SP	Set right-side character spacing		<input type="radio"/>	<input type="radio"/>
ESC !	Select print mode(s)		<input type="radio"/>	<input type="radio"/>
ESC \$	Set absolute print position	<input type="radio"/>		<input type="radio"/>
ESC %	Select/cancel user-defined character set		<input type="radio"/>	<input type="radio"/>
ESC &	Define user-defined characters		<input type="radio"/>	<input type="radio"/>
ESC *	Select bit-image mode	<input type="radio"/>		<input type="radio"/>
ESC -	Turn under line mode on/off		<input type="radio"/>	<input type="radio"/>
ESC 2	Select 1/6-inch line spacing		<input type="radio"/>	<input type="radio"/>
ESC 3	Set line spacing		<input type="radio"/>	<input type="radio"/>
ESC =	Select peripheral device		<input type="radio"/>	<input type="radio"/>
ESC ?	Cancel user-defined characters		<input type="radio"/>	<input type="radio"/>
ESC @	Initialize printer	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
ESC D	Set horizontal tab positions		<input type="radio"/>	<input type="radio"/>
ESC E	Turn emphasized mode on/off		<input type="radio"/>	<input type="radio"/>
ESC G	Turn double-strike mode on/off		<input type="radio"/>	<input type="radio"/>
ESC J	Print and feed paper	<input type="radio"/>		<input type="radio"/>
ESC R	Select an international character set		<input type="radio"/>	<input type="radio"/>
ESC V	Turn 90 clockwise rotation mode on/off		<input type="radio"/>	<input type="radio"/>
ESC \	Set relative print position	<input type="radio"/>		<input type="radio"/>
ESC a	Select justification		<input type="radio"/>	<input type="radio"/>
ESC c3	Select paper sensor(s) to output Paper-end signals		<input type="radio"/>	<input type="radio"/>
ESC c4	Select paper sensor(s) to stop printing		<input type="radio"/>	<input type="radio"/>
ESC c5	Enable/disable panel buttons		<input type="radio"/>	<input type="radio"/>
ESC d	Print and feed paper n lines	<input type="radio"/>		<input type="radio"/>

Country	ASCII code (hexadecimal)												
	Hex	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
	Dec	35	36	64	91	92	93	94	96	123	124	125	126
U.S.A.	#	\$	@	[	\	]	^	`	{		}	~	
France	#	\$	à	°	ç	§	^	`	é	ù	è	"	
Germany	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß	
U.K.	£	\$	@	[	\	]	^	`	{		}	~	
Denmark I	#	\$	@	Æ	ø	Å	^	`	æ	ø	å	~	
Sweden	#	☒	É	Ä	Ö	Å	Ü	è	ä	ö	å	ü	
Italy	#	\$	@	°	\	é	^	ù	à	ò	è	i	
Spain	Pt	\$	@	ı	Ñ	ı	^	`	"	ñ	}	~	
Norway	#	☒	É	Æ	ø	Å	Ü	è	æ	ø	å	ü	
Denmark II	#	\$	É	Æ	ø	Å	Ü	è	æ	ø	å	ü	

### International Character Set

Command	Name	Command Classification		Standard Mode
		Executing	Setting	
ESC i	Partial cut(one point center uncut)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
ESC p	General pulse	<input type="radio"/>		<input type="radio"/>
ESC t	Select character code table		<input type="radio"/>	<input type="radio"/>
ESC {	Turn upside-down printing mode on/off		<input type="radio"/>	( <input type="radio"/> )
GS l	Select character size		<input type="radio"/>	<input type="radio"/>
GS *	Define downloaded bit image		<input type="radio"/>	<input type="radio"/>
GS /	Print downloaded bit image	<input type="radio"/>		●
GS :	Start/end macro definition	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
GS B	Turn white/black reverse printing mode on/off		<input type="radio"/>	<input type="radio"/>
GS H	Select printing position of HRI characters		<input type="radio"/>	<input type="radio"/>
GS l	Transmit print ID	<input type="radio"/>		<input type="radio"/>
GS L	Set left margin		<input type="radio"/>	( <input type="radio"/> )
GS P	Set vertical and horizontal motion units		<input type="radio"/>	<input type="radio"/>
GS V	Select cut mode and cut paper	<input type="radio"/>		( <input type="radio"/> )
GS W	Set printing area width		<input type="radio"/>	( <input type="radio"/> )
GS ^	Execute macro	<input type="radio"/>		<input type="radio"/>
GS f	Select font for HRI characters		<input type="radio"/>	<input type="radio"/>
GS h	Set bar code height		<input type="radio"/>	<input type="radio"/>
GS k	print bar code	<input type="radio"/>		●
GS r	Transmit status	<input type="radio"/>		<input type="radio"/>
GS w	Set bar code width		<input type="radio"/>	<input type="radio"/>

**Command classification**

Executing : Printer executes the command, which does not affect the following data.  
 Setting : Printer uses flags to make setting, and those setting affect the following data.

**Standard mode**

- : Enabled
- () : Enabled only when the command is used at the beginning of a line.
- : Enabled only when data is not present in the buffer.

**Page mode**

- : Enabled
- ▲ : Only setting is possible.

Disabled : Parameters are processed as printable data.  
 Ignored : Command codes and parameters are all ignored.

## Control Commands

### HT

[Name] Horizontal tab.  
 [Format] ASCII HT  
 Hex 09  
 Decimal 9

[Description] Moves the print position to the next horizontal tab position.

### LF

[Name] Print and line feed.  
 [Format] ASCII LF  
 Hex 0A  
 Decimal 10

[Description] Prints the data in the print buffer and feeds one line based on the current line spacing.

### FF

[Name] Print and return to standard mode in page mode.  
 [Format] ASCII FF  
 Hex 0C  
 Decimal 12

[Description] Prints the data in the print buffer collectively and returns to standard mode.

### CR

[Name] Print and carriage return.  
 [Format] ASCII CR  
 Hex 0D  
 Decimal 13

[Description] When automatic line feed is enabled, this command functions the same as LF; when automatic line feed is disabled, this command is ignored.

### CAN

[Name] Cancel print data in page mode.  
 [Format] ASCII CAN  
 Hex 18  
 Decimal 24

[Description] In page mode, deletes all the print data in the current printable area.

**DLE EOT n**

[Name] Real-time status transmission.  
 [Format] ASCII DLE EOT n  
 Hex 10 04 n  
 Decimal 16 4 n  
 [Range]  $1 \leq n \leq 4$   
 [Description] Transmits the selected printer status specified by n in real time, according to the following parameters:  
 n = 1 : Transmit printer status.  
 n = 2 : Transmit off-line status.  
 n = 3 : Transmit error status.  
 n = 4 : Transmit paper roll sensor status.

n = 1 : Printer status.

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Not used. Fixed to Off.
1	On	02	2	Not used. Fixed to On.
2	Off	00	0	Drawer open/close signal is LOW (connector pin 3).
	On	04	4	Drawer open/close signal is HIGH (connector pin 3).
3	Off	00	0	On-line.
	On	08	8	Off-line.
4	On	10	16	Not used. Fixed to On.
5-6	-	-	-	Undefined.
7	Off	00	0	Not used. Fixed to Off.

n = 2 : Off-line status.

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Not used. Fixed to off.
1	On	02	2	Not used. Fixed to On.
2	Off	00	0	Cover is closed.
	On	04	4	Cover is open.
3	Off	00	0	Paper is not being feed by using the PAPER FEED button/
	On	08	8	Paper is being feed by the PAPER FEED button.
4	On	10	16	Not used. Fixed to On.
5	Off	00	0	Not used. Fixed of Off.
6	Off	00	0	Not used. Fixed of Off.
7	Off	00	00	Not used. Fixed of Off.

Bit 5 : Becomes on when the paper end sensor detects paper end and printing stops.

n = 3 : Error status

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Not used. Fixed to Off.
1	On	02	2	Not used. Fixed to On.
2	-	-	-	Undefined.
3	Off	00	0	Not used. Fixed of Off.
4	On	10	16	Not used. Fixed to On.
5	Off	00	0	Not used. Fixed of Off.
6	Off	00	0	Not used. Fixed of Off.
7	Off	00	0	Not used. Fixed to Off.

Bit 3 : If these errors occur due to paper jams or the like, it is possible to recover by correcting the cause of the error and executing DLE ENQ n(1 < n < 2).  
 If an error due to a circuit failure (e.g. wire break) occurs, it is impossible to recover.

Bit 6 : When printing is stopped due to high print head temperature until the print head temperature drops sufficiently or when the paper roll cover is open during printing, bit 6 is On.

n = 4 : Continuous paper sensor status.

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Not used. Fixed to Off.
1	On	02	2	Not used. Fixed to On.
2,3	Off	00	0	Paper roll near-end sensor. Paper adequate.
	On	0C	12	Paper near-end is detected by the paper roll near-end sensor.
4	On	10	16	Not used. Fixed to On.
5, 6	Off	00	0	Not roll end sensor. Paper present.
	On	60	96	Paper is detected by the paper roll end sensor.
7	Off	00	0	Not used. Fixed to Off.

**ESC SP n**

[Name] Set right-side character spacing.  
 [Format] ASCII ESC SP n  
 Hex 1B 20 n  
 Decimal 27 32 n  
 [Range]  $0 \leq n \leq 255$   
 [Description] Sets the character spacing for the right side of the character to [n x horizontal or vertical motion units].

**ESC ! n**

[Name] Select print modes.  
 [Format] ASCII ESC ! n  
 Hex 1B 21 n  
 Decimal 27 33 n  
 [Range]  $0 \leq n \leq 255$   
 [Description] Selects print mode(s) using n as follows:

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Character font A (12 x 24)
	On	01	1	Character font B (9 x 24)
1	-	-	-	Undefined.
2	-	-	-	Undefined.
3	Off	00	0	Emphasized mode not selected.
	On	08	8	Emphasized mode selected.
4	Off	00	0	Double-height mode not selected.
	On	10	16	Double-height mode selected.
5	Off	00	0	Double-width mode not selected.
	On	20	32	Double-width mode selected.
6	-	-	-	Undefined.
	7	Off	00	0
	On	80	128	Underline mode selected.

**ESC-\$ nL nH**

[Name] Set absolute print position.  
 [Format] ASCII ESC \$ nL nH  
 Hex 1B 24 nL nH  
 Decimal 27 36 nL nH  
 [Range]  $0 \leq nL \leq 255$   
 $0 \leq nH \leq 255$   
 [Description] Set the distance from the beginning of the line to the position at with subsequent characters are to be printed.  
 • The distance from the beginning of the line to the print position is [(nL + nH x 256) x (vertical or horizontal motion unit)] inches.

**ESC % n**

[Name] Select/Cancel user-defined character set.  
 [Format] ASCII ESC % n  
 Hex 1B 25 n  
 Decimal 27 37 n  
 [Range]  $0 \leq n \leq 255$   
 [Description] Selects or cancels the user-defined character set.  
 • When the LSB of n is 0, the user-defined character set is canceled.  
 • When the LSB of n is 1, the user-defined character set is selected.

**ESC & y c1 cw [x1 d1...d(y x x1)]...[xk d1...d(y x xk)]**

[Name] Define user-defined characters.  
 [Format] ASCII ESC & y c1 c2[x1 d1...d(y x x1)]...[xk d1//d(y x xk)]  
 Hex 1B 26 y c1 c2[x1 d1...d(y x x1)]...[xk d1//d(y x xk)]  
 Decimal 27 38 y c1 c2[x1 d1...d(y x x1)]...[xk d1//d(y x xk)]  
 [Range]  $y = 3$   
 $32 \leq c1 \leq c2 \leq 126$   
 $0 \leq x \leq 12$  Font A (12 x 24)  
 $0 \leq x \leq 9$  Font B ( 9 x 24)  
 $0 \leq d1 \dots d(y \times xk) \leq 255$   
 [Description] Defines user-defined characters.  
 • y specifies the number of bytes in the vertical direction.  
 • c1 specifies the beginning character code for the definition, and c2 specifies the final code.  
 • x specifies the number of dots in the horizontal direction.

**ESC \* m nL nH d1...dk**

[Name] Select bit-image mode.  
 [Format] ASCII ESC \* m nL nH d1 ... dk  
 Hex 1B 2A m nL nH d1 ... dk  
 Decimal 27 42 m nL nH d1 ... dk  
 [Range]  $m = 0, 1, 32, 33$   
 $0 \leq nL \leq 255$   
 $0 \leq nH \leq 3$   
 $0 \leq d \leq 255$   
 [Description] Selects a bit-image mode using m for the number of dots specified by nL and nH, as follows:

m	Mode	Vertical direction		Horizontal direction	
		Number of Dots	Dot Density	Dot Density	Number of Data (k)
0	8-dot single-density	8	60 DPI	90 DPI	$nL + nH \times 256$
1	8-dot double-density	8	60 DPI	180 DPI	$nL + nH \times 256$
32	24-dot single-density	24	180 DPI	90 DPI	$(nL + nH \times 256) \times 3$
33	24-dot double-density	24	180 DPI	180 DPI	$(nL + nH \times 256) \times 3$

**ESC - n**

[Name] Turn underline mode on/off.  
 [Format] ASCII ESC - n  
 Hex 1B 2D n  
 Decimal 27 45 n  
 [Range]  $0 \leq n \leq 2, 48 \leq n \leq 50$   
 [Description] Turns underline mode on or off, based on the following values of n:

n	Function
0, 48	Turns off underline mode.
1, 49	Turns on underline mode (1-dot thick).
2, 50	Turns on underline mode (2-dots thick).

**ESC 2**

[Name] Select default line spacing.  
 [Format] ASCII ESC 2  
 Hex 1B 32  
 Decimal 27 50  
 [Description] Select 1/6-inch line (approximately 4.23mm) spacing.

**ESC 3 n**

[Name] Set line spacing.  
 [Format] ASCII ESC 3 n  
 Hex 1B 33 n  
 Decimal 27 51 n  
 [Range]  $0 \leq n \leq 255$   
 [Description] Sets the line spacing to [n x vertical or horizontal motion unit] inches.

**ESC = n**

[Name] Set peripheral device.  
 [Format] ASCII ESC = n  
 Hex 1B 3D n  
 Decimal 27 61 n  
 [Range]  $0 \leq n \leq 3$   
 [Description] Selects device to which host computer sends data, using n as follows:

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Printer disabled.
	On	01	1	Printer disabled.
1-7	-	-	-	Undefined.

**ESC ? n**

[Name] Cancel user-defined characters.  
 [Format] ASCII ESC ? n  
 Hex 1B 3F n  
 Decimal 27 63 n  
 [Range]  $32 \leq n \leq 126$   
 [Description] Cancels user-defined characters.

**ESC @**

[Name] Initialize printer.  
 [Format] ASCII ESC @  
 Hex 1B 40  
 Decimal 27 64  
 [Description] Clears the data in the print buffer and resets the printer mode to the mode that was in effect when the power was turned on.

**ESC D n1...nk NUL**

[Name] Set horizontal tab positions.  
 [Format] ASCII ESC D n1...nk NUL  
 Hex 1B 44 n1...nk 00  
 Decimal 27 68 n1...nk 0  
 [Range]  $1 \leq n \leq 255$   
 $0 \leq k \leq 32$   
 [Description] Sets horizontal tab position.
 

- n specifies the column number for setting a horizontal tab position from the beginning of the line.
- k indicates the total number of horizontal tab positions to be set.

**ESC E n**

[Name] Turn emphasized mode on/off.  
 [Format] ASCII ESC E n  
 Hex 1B 45 n  
 Decimal 27 69 n  
 [Range]  $1 \leq n \leq 255$   
 [Description] Turns emphasized mode on or off.  
 When the LSB is 0, emphasized mode is turned off.  
 When the LSB is 1, emphasized mode is turned on.

**ESC G n**

[Name] Turn on/off double-strike mode.

[Format]	ASCII	ESC	G	n
	Hex	1B	47	n
	Decimal	27	71	n

[Range]  $0 \leq n \leq 255$ 

[Description] Turns emphasized mode on or off.

- When the LSB is 0, double-strike mode is turned off.
- When the LSB is 1, double-strike mode is turned on.

**ESC J n**

[Name] Print and feed paper.

[Format]	ASCII	ESC	J	n
	Hex	1B	4A	n
	Decimal	27	74	n

[Range]  $0 \leq n \leq 255$ 

[Description] Prints the data in the print buffer and feeds the paper [n x vertical or horizontal motion unit] inches.

**ESC R n**

[Name] Select an international character set.

[Format]	ASCII	ESC	R	n
	Hex	1B	52	n
	Decimal	27	82	n

[Range]  $0 \leq n \leq 10$ 

[Description] Selects an international character set n from the following table.

n	Character set	n	Character set
0	U.S.A.	5	Sweden
1	France	6	Italy
2	Germany	7	Spain
3	U.K.	9	Norway
4	Denmark I	10	Denmark II

[Default] n = 0

**ESC V n**

[Name] Turn 90° clockwise rotation mode on/off.

[Format]	ASCII	ESC	V	n
	Hex	1B	56	n
	Decimal	27	86	n

[Range]  $0 \leq n \leq 3$ [Range]  $48 \leq n \leq 49$ [Description] Turns 90° clockwise rotation mode on/off  
n is used as follows:

n	Function
0, 48	Turn off 90° clockwise rotation mode
1, 49	Turns on 90° clockwise rotation mode

**ESC \ nL nH**

[Name] Set relative print position.

[Format]	ASCII	ESC	\	nL	nH
	Hex	1B	5C	nL	nH
	Decimal	27	92	nL	nH

[Range]  $0 \leq nL \leq 255$ [Range]  $0 \leq nH \leq 255$ 

[Description] Selects the print starting position based on the current position by using the horizontal or vertical motion unit.

- This command sets the distance from the current position to [(nL + nH x 256) x horizontal or vertical motion unit]

**ESC a n**

[Name] Select justification.

[Format]	ASCII	ESC	a	n
	Hex	1B	61	n
	Decimal	27	97	n

[Range]  $0 \leq n \leq 2$ [Range]  $48 \leq n \leq 50$ [Description] Aligns all the data in one line to the specified position.  
n selects the type of justification as follows:

n	Justification
0, 48	Left justification
1, 49	Centering
2, 50	Right justification



**ESC \ nL nH**

[Name] Set relative print position.  
 [Format] ASCII ESC \ nL nH  
 Hex 1B 5C nL nH  
 Decimal 27 92 nL nH  
 [Range]  $0 \leq nL \leq 255$   
 $0 \leq nH \leq 255$   
 [Description] Selects the print starting position based on the current position by using the horizontal or vertical motion unit.  
 • This command sets the distance from the current position to [(nL + nH x 256) x horizontal or vertical motion unit]

**ESC a n**

[Name] Select justification.  
 [Format] ASCII ESC a n  
 Hex 1B 61 n  
 Decimal 27 97 n  
 [Range]  $0 \leq n \leq 2$   
 $48 \leq n \leq 50$   
 [Description] Aligns all the data in one line to the specified position. n selects the type of justification as follows:

n	Justification
0, 48	Left justification
1, 49	Centering
2, 50	Right justification

**ESC c 3 n**

[Name] Select paper sensor(s) to output paper end signals.  
 [Format] ASCII ESC c 3 n  
 Hex 1B 63 33 n  
 Decimal 27 99 51 n  
 [Range]  $0 \leq n \leq 255$   
 [Description] Selects the paper sensor(s) to output paper end signals.  
 • Each bit of n is used as follows:

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Paper roll near-end sensor disabled.
	On	01	1	Paper roll near-end sensor enabled.
1	Off	00	0	Paper roll near-end sensor disabled.
	On	02	2	Paper roll near-end sensor enabled.
2	Off	00	0	Paper roll end sensor disabled.
	On	04	4	Paper roll end sensor enabled.
3	Off	00	0	Paper roll end sensor disabled.
	On	08	8	Paper roll end sensor enabled.
4-7	-	-	-	Undefined.

**ESC c 4 n**

[Name] Select paper sensor(s) to stop printing.  
 [Format] ASCII ESC c 4 n  
 Hex 1B 63 34 n  
 Decimal 27 99 52 n  
 [Range]  $0 \leq n \leq 255$   
 [Description] Selects the paper sensor(s) used to stop printing when a paper-end is detected, using n as follows:

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Paper roll end sensor disabled.
	On	01	1	Paper roll end sensor enabled.
1	Off	00	0	Paper roll end sensor disabled.
	On	02	2	Paper roll end sensor enabled.
2-7	-	-	-	Undefined.

**ESC c 5 n**

[Name]	Enable/Disable panel buttons.				
[Format]	ASCII	ESC	c	5	n
	Hex	1B	63	35	n
	Decimal	27	99	53	n
[Range]	0 ≤ n ≤ 255				
[Description]	Enables or disables the panel buttons. <ul style="list-style-type: none"> <li>• When the LSB is 0, the panel buttons are enabled.</li> <li>• When the LSB is 1, the panel buttons are disabled.</li> </ul>				

**ESC d n**

[Name]	Print and feed n lines.			
[Format]	ASCII	ESC	d	n
	Hex	1B	64	n
	Decimal	27	100	n
[Range]	0 ≤ n ≤ 255			
[Description]	Prints the data in the print buffer and feeds n lines.			

**ESC i n**

[Name]	Partial Cut		
[Format]	ASCII	ESC	i
	Hex	1B	69
	Decimal	27	105
[Range]	0 ≤ n ≤ 255		
[Description]	Prints the data in the print cut of paper.		

**ESC p m t1 t2**

[Name]	Generate pulse.				
[Format]	ASCII	ESC	p	m	t1 t2
	Hex	1B	70	m	t1 t2
	Decimal	27	112	m	t1 t2
[Range]	m = 0, 1, 48, 49 0 ≤ t1 ≤ 255, 0 ≤ t2 ≤ 255				
[Description]	Outputs the pulse specified by t1 & t2 to connector pin m as follows:				

m	Connector pin
0, 48	Drawer kick-out connector pin 2
1, 49	Drawer kick-out connector pin 5

**ESC t n**

[Name]	Select character code table.			
[Format]	ASCII	ESC	t	n
	Hex	1B	74	n
	Decimal	27	116	n
[Range]	0 ≤ n ≤ n, n = 255			
[Description]	Selects a page n from the character code table.			

n	Page
0	0 (PC437 [U.S.A., standard Europe])
1	1 (Katakana)
2	2 (PC850 [Multilingual])
3	3 (PC860 [Portuguese])
4	4 (PC863 [Canadian-French])
5	5 (PC865 [Nordic])
255	Space page

**ESC { n**

[Name]	Turn on/off upside-down printing mode.		
[Format]	ASCII	ESC	{
	Hex	1B	7B
	Decimal	27	123
[Range]	0 ≤ n ≤ 255		
[Description]	Turns upside-down printing mode on or off. <ul style="list-style-type: none"> <li>• When the LSB is 0, upside-down printing mode is turned off.</li> <li>• When the LSB is 1, upside-down printing mode is turned on.</li> </ul>		

**GS ! n**

[Name] Select character size.  
 [Format] ASCII GS ! n  
 Hex 1D 21 n  
 Decimal 29 33 n  
 [Range]  $0 \leq n \leq 255$   
 ( $1 \leq$  vertical number of times  $\leq 8$ ,  $1 \leq$  horizontal number of times  $\leq 8$ )  
 [Description] Selects the character height using bits 0 to 2 and selects the character width using bits 4 to 7, as following:

Bit	Off/On n	Hex	Decimal	Function
0-1				Character height selection. See Table 2
4-5				Character width selection. See Table 1

**Table 1**  
Character Width Selection

Hex	Decimal	Width
00	0	1(normal)
10	16	2(double-width)

**Table 2**  
Character Height Selection

Hex	Decimal	Width
00	0	1(normal)
01	1	2(double-width)

**GS \* x y d1...d(x x y x 8)**

[Name] Define downloaded bit image.  
 [Format] ASCII GS \* x y d1...d(x x y x 8)  
 Hex 1D 2A x y d1...d(x x y x 8)  
 Decimal 29 42 x y d1...d(x x y x 8)  
 [Range]  $0 \leq n \leq 255$   
 $1 \leq y \leq 255$   
 $x \times y \leq 1536$   
 $0 \leq d \leq 255$   
 [Description] Defines a download'd bit image using the dots specified by x any y.  
 • x indicates the number of dots in the horizontal direction.  
 • y indicates the number of dots in the vertical direction.

**GS / m**

[Name] Print downloaded bit image.  
 [Format] ASCII GS / m  
 Hex 1D 2F m  
 Decimal 29 47 m  
 [Range]  $0 \leq m \leq 3$ ,  $48 \leq m \leq 51$   
 [Description] Prints a downloaded bit image using the mode specified by m.  
 m selects a mode from the table below:

m	Mode	Vertical Dot Density(DPI)	Horizontal Dot Density(DPI)
0, 48	Normal	180	180
1, 49	Double-width	180	90
2, 50	Double-height	90	180
3, 51	Quadruple	90	90

**GS :**

[Name] Start/End macro definition.  
 [Format] ASCII GS :  
 Hex 1D 3A  
 Decimal 29 58  
 [Description] Starts or ends macro definition.

**GS B n**

[Name] Turn white/black reverse printing mode on/off.  
 [Format] ASCII GS B n  
 Hex 1D 42 n  
 Decimal 29 66 n  
 [Range]  $0 \leq n \leq 255$   
 [Description] Turn on or off white/black reverse printing mode.  
 • When the LSB is 0, white/black reverse printing mode is turned off.  
 • When the LSB is 1, white/black reverse printing mode is turned on.

### GS H n

[Name] Select printing position of HRI characters.  
 [Format] ASCII ESC H n  
 Hex 1B 48 n  
 Decimal 27 72 n  
 [Description] Selects the printing position of HRI characters when printing a bar code.  
 n selects the printing position as follows:

n	Printing position
0, 48	Not printed.
1, 49	Above bar code.
2, 50	Below bar code.
3, 51	Both above and below the bar code.

• HRI indicates Human Readable Interpretation.


### GS I n

[Name] Transmit printer ID.  
 [Format] ASCII GS I n  
 Hex 1D 49 n  
 Decimal 29 73 n  
 [Range]  $1 \leq n \leq 3, 49 \leq n \leq 51$   
 [Description] Transmits the printer ID specified by n as follows:

n	Printer ID	Specification	ID (hexadecimal)
1, 49	Printer mode ID	STP130S/STP130P	30
2, 50	Type ID		02
3, 51	ROM version ID	Depends on ROM version	10

### GS L nL nH

[Name] Set left margin.  
 [Format] ASCII GS L nL nH  
 Hex 1D 4C nL nH  
 Decimal 29 76 nL nH  
 [Range]  $1 \leq nL \leq 255$   
 $0 \leq nH \leq 255$   
 [Description] Set the left margin using nL and nH.  
 • The left margin is set to  $[(nL + nH \times 256) \times \text{horizontal motion unit}]$  inches.



39

### GS P x y

[Name] Set horizontal and vertical motion units.  
 [Format] ASCII GS P x y  
 Hex 1D 50 x y  
 Decimal 29 80 x y  
 [Range]  $1 \leq x \leq 255$   
 $0 \leq y \leq 255$   
 [Description] Sets the horizontal and vertical motion units to approximately 25.4/x mm {1/x inch and} and approximately 25.4/y mm {1/y inches}, respectively.  
 When x and y are set to 0, the default setting of each value is used


### ① GS V m, ② GS V m n

[Name] Select cut mode and cut paper.  
 [Format] ① ASCII GS V m  
 Hex 1D 56 m  
 Decimal 29 86 m  
 ② ASCII GS V m n  
 Hex 1D 56 m n  
 Decimal 29 86 m n  
 [Range] ①  $m = 1, 49$   
 ②  $m = 66, 0 \leq n \leq 255$   
 [Description] Selects a mode for cutting paper and executes paper cutting.  
 The value of m selects the mode as follows:

m	Print mode
0, 1, 49	Partial cut (one point center uncut)
66	Feeds paper (cutting position + [n x vertical motion unit]), and cuts the paper partially (one point center uncut).

### GS W nL nH

[Name] Set printing area width.  
 [Format] ASCII GS W nL nH  
 Hex 1D 57 nL nH  
 Decimal 29 87 nL nH  
 [Range]  $0 \leq nL \leq 255$   
 $0 \leq nH \leq 255$   
 [Description] Set the printing area width to the area specified by nL and nH.  
 • The printing area width is set to  $[(nL + nH \times 256) \times \text{horizontal motion unit}]$  inches.

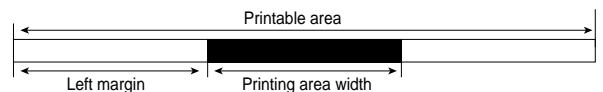

40

**GS ^ r t m**

[Name] Execute macro.  
 [Format] ASCII GS ^ r t m  
 Hex 1D 5E r t m  
 Decimal 29 94 r t m  
 [Range]  $0 \leq r \leq 255$   
 $0 \leq t \leq 255$   
 [Description]  $m = 0, 1$   
 Executes a macro.  
 • r specifies the number of times to execute the macro.  
 • t specifies the waiting time for executing the macro.  
 • m specifies macro executing mode.  
 When the LSB of  $m = 0$   
 The macro executes r times continuously at the interval specified by t.  
 When the LSB of  $m = 1$ :  
 After waiting for the period specified by t, the PAPER OUT LED indicators blink and the printer waits for the FEED button to be pressed. After the button is pressed, the printer executes the macro once. The printer repeats the operation r times.

**Gs f n**

[Name] Select font for Human Readable Interpretation(HRI) characters.  
 [Format] ASCII GS f n  
 Hex 1D 66 n  
 Decimal 29 102 n  
 [Range]  $n = 0, 1, 48, 49$   
 [Description] Selects a font for the HRI characters used when printing a bar code. n selects a font from the following table:

n	Font
0, 48	Font A (12 x 24)
1, 49	Font B (9 x 24)

**GS h n**

[Name] Set bar code height.  
 [Format] ASCII GS h n  
 Hex 1D 68 n  
 Decimal 29 104 n  
 [Range]  $1 \leq n \leq 255$   
 [Description] Set the height of the bar code.  
 n specifies the number of dots in the vertical direction.

**① GS k m d1... dk NUL, ② GS k m n d1... dn**

[Name] Print bar code.  
 [Format] ① ASCII GS k m d1...dk NUL  
 Hex 1D 6B m d1...dk 00  
 Decimal 29 107 m d1...dk 0  
 ② ASCII GS V m n d1... dn  
 Hex 1D 56 m n d1... dn  
 Decimal 29 86 m n d1... dn  
 [Range] ①  $0 \leq m \leq 6$  (k and d depends on the bar code system used.)  
 ②  $65 \leq m \leq 73$  (n and d depends on the bar code system used)  
 [Description] Selects a bar code system and prints the bar-code.  
 m selects a bar code system as follows:

m	Bar Code System	Number of Characters	Remarks
①	0	UPC-A	$11 \leq k \leq 12$ $48 \leq d \leq 57$
	1	UPC-E	$11 \leq k \leq 12$ $48 \leq d \leq 57$
	2	JAN13(EAN13)	$12 \leq k \leq 13$ $48 \leq d \leq 57$
	3	JAN8(EAN8)	$7 \leq k \leq 8$ $48 \leq d \leq 57$
	4	CODE39	$1 \leq k$ $48 \leq d \leq 57, 65 \leq d \leq 90, 32, 36, 37, 43, 45, 46, 47$
	5	ITF	$1 \leq k$ (even number) $48 \leq d \leq 57$
②	6	CODABAR	$1 \leq k$ $48 \leq d \leq 57, 65 \leq d \leq 68, 36, 43, 45, 46, 47, 58$
	65	UPC-A	$11 \leq n \leq 12$ $48 \leq d \leq 57$
	66	UPC-E	$11 \leq n \leq 12$ $48 \leq d \leq 57$
	67	JAN13(EAN13)	$12 \leq n \leq 13$ $48 \leq d \leq 57$
	68	JAN8(EAN8)	$7 \leq n \leq 8$ $48 \leq d \leq 57$
	69	CODE39	$1 \leq n \leq 255$ $48 \leq d \leq 57, 65 \leq d \leq 90, 32, 36, 37, 43, 45, 46, 47, d1 = dk = 42(1)$
	70	ITF	$1 \leq n \leq 255$ (even number) $48 \leq d \leq 57$
	71	CODABAR	$1 \leq n \leq 255$ $48 \leq d \leq 57, 65 \leq d \leq 68, 36, 43, 45, 46, 47, 58$
	72	CODE93	$1 \leq n \leq 255$ $0 \leq d \leq 127$
	73	CODE128	$2 \leq n \leq 255$ $0 \leq d \leq 127$

GS r n				
[Name]	Transmit status.			
[Format]	ASCII	GS	r	n
	Hex	1D	72	n
	Decimal	29	114	n
[Range]	n = 1, 2, 49, 50			
[Description]	Transmits the status specified by n as follows.			
n	Function			
1, 49	Transmits paper sensor status.			
2, 50	Transmits drawer kick-out connector status.			

GS w n				
[Name]	Set bar code width.			
[Format]	ASCII	GS	w	n
	Hex	1D	77	n
	Decimal	29	119	n
[Range]	2 ≤ n ≤ 6			
[Description]	Set the horizontal size of the bar code. n specifies the bar code width as follows.			

n	Module width for multi-level bar code	Binary-level bar code	
		Thin element width (mm)	Thick element width (mm)
2	0.282	0.282	0.706
3	0.423	0.423	1.129
4	0.564	0.564	1.411
5	0.706	0.706	1.834
6	0.847	0.847	2.258


- Mult-level bar codes are as follows :  
UPC-A, UPC-E, JAN13(ENA13), JAN8(EAN8), CODE93, CODE128.
- Binary-level bar codes are as follows.  
CODE39, ITF, CODABAR

## APPENDIX

### A. Connectors



Power supply connector



Interface connector



Drawer kick-out connector


### STP131 Series Connector (Serial/Parallel Interface)

#### Interface Connector

##### Serial Interface

Pin No.	Signal name	Direction	Function
	FG	-	Frame Ground
2	TxD	Output	Transmit Data
3	RxD	Input	Receive Data
5	CTS	Input	Data Set Ready
7	SG	-	Signal Ground
4	RTS	Output	Data Terminal Ready


### Serial Communication Interface(Example)

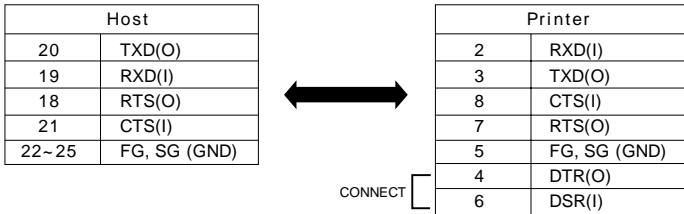

### Drawer Connector

Pin No.	Signal name	Direction
1	Frame ground	-
2	Drawer kick-out drive signal 1	Output
3	Drawer open/close signal	Input
4	+24V	-
5	Drawer kick-out drive signal 2	Output
6	Signal ground	-

### Parallel Interface

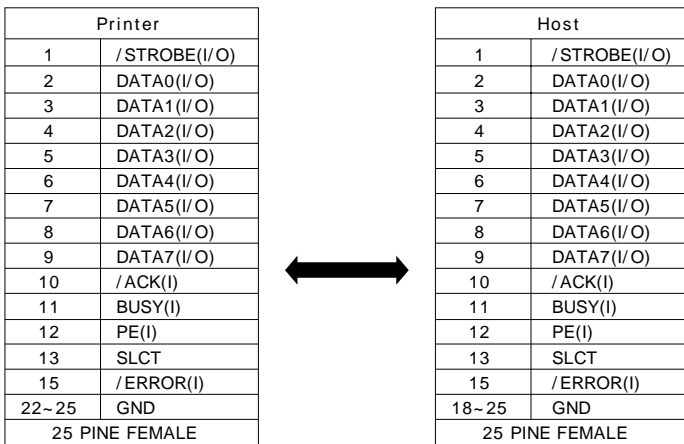

### B. Notes

Paper dust inside the printer may lower the print quality. In this case clean the printer as follows.

- 1) Open the printer cover and remove the paper if exists.
- 2) Clean the print head with a cotton swab moistened with alcohol solvent.
- 3) Clean the platen roller and paper end sensor with cotton swab moistened with water.
- 4) Insert a paper roll and close the printer cover.

The remained amount of paper detected by paper near end sensor varies with the diameter of the paper core.

To adjust the remained amount, contact your dealer.

Ⓜ14, 16~21 : NC

### C. Specification

<b>Printing method</b>	Thermal line printing	
<b>Dot density</b>	180 X 180 dpi (7dots/mm)	
<b>Printing width</b>	72.192 ± 0.2 mm	
<b>Paper width</b>	79 ~ 80 mm	
<b>Characters per line (default)</b>	42 (Font A) (12 x 24) 56 (Font B) ( 9 x 24)	
<b>Printing speed</b>	17.3 lines/sec(1/6" Feed) 73.3 mm/sec	
<b>Receive Buffer Size</b>	15K Bytes	
<b>NOTE</b> : Printing speed may be slower, depending on the data transmission speed and the combination of control commands.		
<b>Supply voltage</b>	Input voltage	120/230 VAC
	Frequency	50/60 Hz
	Output voltage	+24 VDC / 2.3A
<b>Environmental conditions</b>	Temperature	5 ~ 45°C (Operating) -10 ~ 50°C (Storage)
	Humidity	30 ~ 80 % RH (Operating) 10 ~ 90 % RH (Storage) ; Except for paper
<b>LIFE *</b>	Mechanism	15,000,000 lines
	Head	100million pulse (Approximately 100 Km)
<b>MCBF *</b>	Auto Cutter	1,500,000 Cuts
	Thermal paper	30,000,000 lines

#### ⌘Paper

- Paper thickness : 0.065 ~ 0.1mm
- Roll size : 50 ~ 79.5(w)
- Roll spool diameter
  - 1) Inside : 12mm (0.47")
  - 2) Outside : 18mm (0.71")

**JF01-000041**